


## DISPLAY AND CROWN / BUTTON OPERATION

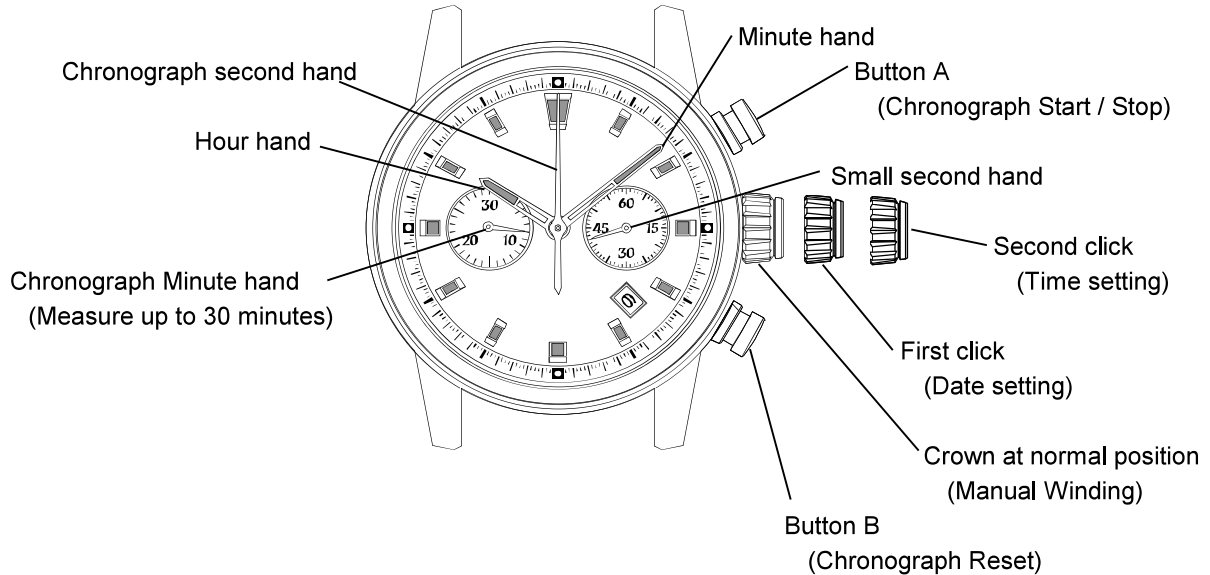

### 1. How to set the time

- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.  
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

#### Note

During time setting, if the chronograph is started, chronograph minute hands will rotate simultaneously. This is not a malfunction. Please reset chronograph by pushing button B. Chronograph hour and minute hands will return to their reset positions.

### 2. How to set the date

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.  
\*Do not set the date between 8:00 P.M. and 2:00 A.M. as this will cause a malfunction.
- 3) Push the crown back into the normal position.


### 3. To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)  
Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.  
Full wind up conditions (Reference information)
  - Rotary speed : 30 rpm
  - Operating time : 60 minutes

**HOW TO USE THE CHRONOGRAPH**

**[ Standard measurement ]**

Press the buttons in the following order : A → A → B

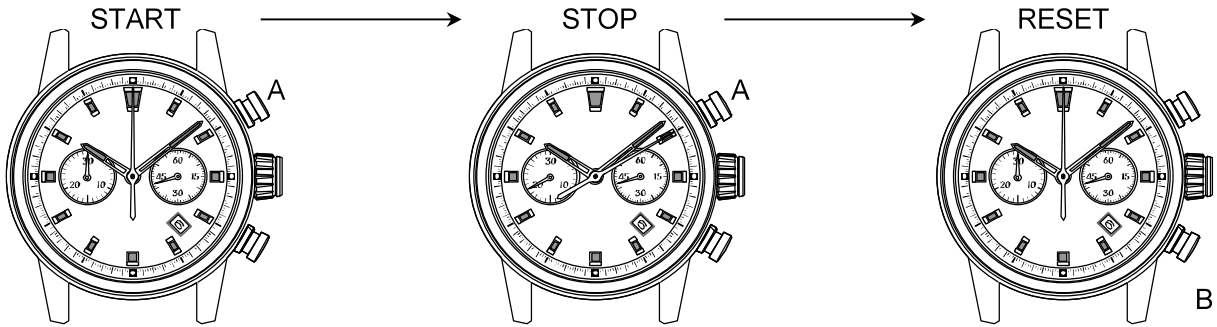


• Press button A to start chronograph.  
Chronograph second hand will start moving.

( 20 minutes 10 seconds )  
• Press button A again to stop chronograph.  
Chronograph hands stop to indicate the elapsed time.

• Press button B to reset chronograph.  
All chronograph hands will be reset to "0" position.

**[ Accumulated elapsed time measurement ]**

Press the buttons in the following order : A → A / A → A → B

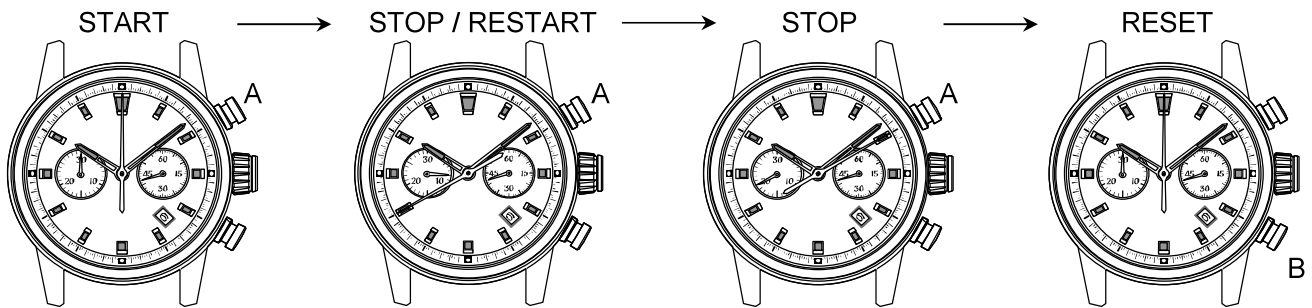

( 8 minutes 40 seconds )      ( 20 minutes 10 seconds )

\*Restart and stop of chronograph can be repeated as many times as necessary by pressing button A