

Chronograph
with alarm
ETA 251.242

Eta Swiss Quartz

317 240 - 02/00

DISPLAY **A**

*Crown in position 3 = movement stop

SETTING THE TIMERS **B**

Crown in position 2

NOTES:
All the hands of the timers must be at 12 o'clock.
Pressing the pushbuttons briefly will move the hands forward step by step.
Press and hold (>1 second) to generate a direct movement of the hands (quick correction).

DATE AND TIME ZONE **C**

Crown in position 2

NOTE:
The date is adjusted every time the hand goes past midnight.
When changing time zones, you must ensure that the internal clock time is synchronised with the analog time.

HAND-SETTING AND SYNCHRONISATION **D**

Crown in position 3

Synchronising the time of the internal clock with the analogue time and winter/summer time.

NOTE:
Press and hold (>1 second), to generate a direct movement of the hands (quick correction).
Wait that the small second hand has reached 12 o'clock before holding the setting time-crown in position 3.

ALARM **E**

ADJUSTING THE ALARM TIME
Crown in position 1

NOTES:
The 30 minutes timer is placed in "SET ALARM" position.
Pressing the pushbuttons briefly will move the hands forward step by step.
Press and hold (>1 sec.) to generate a direct movement of the hands (quick correction).
After 15 seconds, the "Set Alarm" mode is deactivated.
1 to **4** order of functions

ALARM **F**

ON/OFF STATUS AND TESTING THE STRIKING-MECHANISM
Crown in position 1

NOTES:
The alarm device is alternately activated (ON) or deactivated (OFF).
A tone indicates when the alarm is activated (ON).
These functions cannot be used if timing is in process or stopped.

CHRONOGRAPH **G**

SIMPLE FUNCTION
Crown in position 1

NOTE:
For all chronograph functions- RESET TO ZERO - The hands of the 60 seconds chrono and 30 minutes timers are reset to zero. The hand of the 1/10 second timer indicates the alarm status.

1 to **3** order of functions

CHRONOGRAPH **H**

ADD FUNCTION
Crown in position 1

1 to **X** order of functions

CHRONOGRAPH **I**

SPLIT FUNCTION - INTERMEDIATE TIMES
Crown in position 1

1 to **5** order of functions

CHRONOGRAPH **J**

SPLIT FUNCTION - INTERMEDIATE TIMES (cont'd)
Crown in position 1
Simultaneous double-timing (T1, T2)

1 to **5** order of functions

CHRONOGRAPH **K**

FLY-BACK FUNCTION
New automatic timing
Crown in position 1

NOTES:
The FLY-BACK function can be activated only during timing either current or stopped.
The hands of the 30 minutes (time>1 minute), 60 seconds Chrono and 1/10 second timers are reset to zero and a new timing automatically starts.

1 to **4** order of functions