



| Time indication | NH35 | NH36 | NH37 | NH38 | NH39 |
|----------------------------------|------|------|------|------|------|
| 3Hands (Hour, Minute, Second) | ○ | ○ | ○ | ○ | ○ |
| Date calendar | ○ | ○ | ○ | - | - |
| Day calendar | - | ○ | - | - | - |
| 24hour indicator | - | - | ○ | - | ○ |

1.How to set the time

- 1) Pull out the crown to the second click position. (Cal.NH35A/36A/37A)
Pull out the crown to the first click position. (Cal.NH38A/39A)
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

2.How to set the Date (Cal.NH35A/36A/37A)

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting. (Cal.NH36A only)
*Do not set the date between 9:00 P.M. and 4:00 A.M. as this will cause a malfunction.
- 3) Push the crown back into the normal position.

3.To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)
Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.
Full wind up conditions (Reference information)
 - Rotary speed : 30 rpm
 - Operating time : 60 minutes