GB
USA

# CHRONOGRAPH WITH ALARM

## ETA 251.265

ETA SA Manufacture Horlogère Suisse
depuis 1793

317 249 - 06.11.2009 / ETA / 02

## DISPLAY A

Watch hands

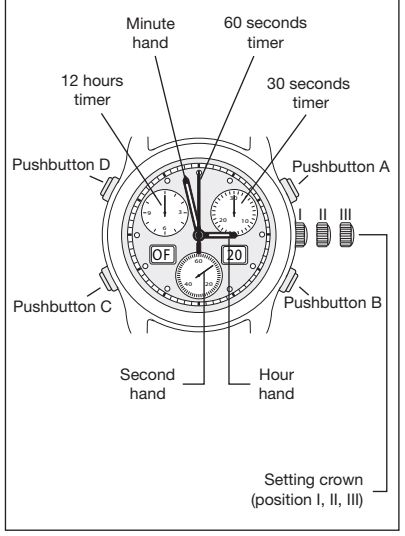


## DISPLAY B

Digital watch indicators

Left indicator

1. Crown position I
   Display of alarm ON/OFF
   Display of alarm function AL
   Display of alarm hours
   Display of chrono mode CH
   Display of chrono functions:
   - ADD function: display Ad
   - SPLIT function: display SL
   - LAP function: display LP
2. Crown position II
   Time TI
   Display of hours of digital time according to the change of the time zone
3. Krone in Position III
   Time TI
   Flashing of hours of digital time
   Flashing of month M

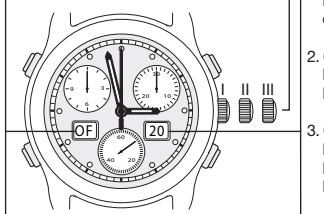


Right indicator

1. Crown position I
   Display of date d
   Display AM/PM/24H of alarm
   Display of alarm minutes
   Display of 1/100 seconds in chrono mode
2. Crown position II
   Display AM/PM/24H of time
   Display of minutes of digital time
3. Crown position III
   Display of AM/PM/24H mode
   Flashing of minutes of digital time
   Flashing of day d

## EINSTELLEN DER UHRZEIT C

Setting crown in position III

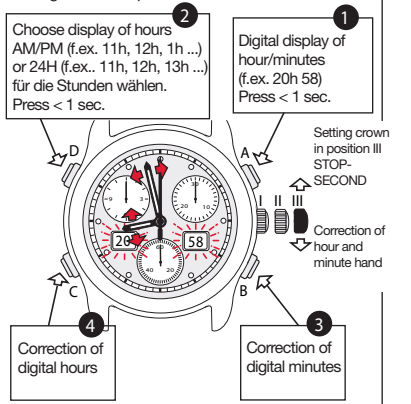


NOTE:
- Make sure that the analog time always corresponds to the digital time.
- In order to perfectly synchronise analog and digital time, stop the second (by pulling the setting crown to position III) just when the second hand reaches 60".

PUSHBUTTONS:
- Quick correction by pressing > 1 sec.

## CORRECTION OF MONTH / DATE D

Setting crown in position III

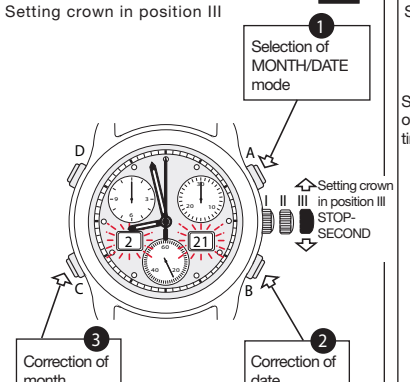


In case of a leap year, February 28 will be followed by March 1.
Set February 29 by hand:
- put the setting crown in intermediate position (II) (time zone correction).
- turn the hour hand twice anti-clockwise (2 full turns).
- put back the setting crown in position (I).

11/09

## SETTING THE TIMERS TO ZERO E

Setting crown in position II

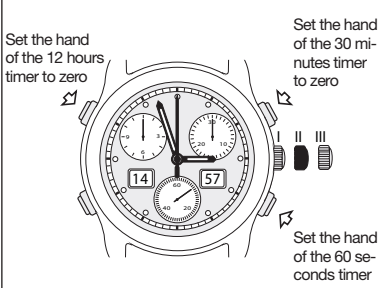


BEMERKUNG:

Kurzes Betätigen des Drückers:
schrittweises Vorbewegen des Zeigers.

Langes Betätigen (> 1 Sek.) des Drückers:
beschleunigtes Vorbewegen des Zeigers.

## ALARM F

Set the alarm, setting crown in position I

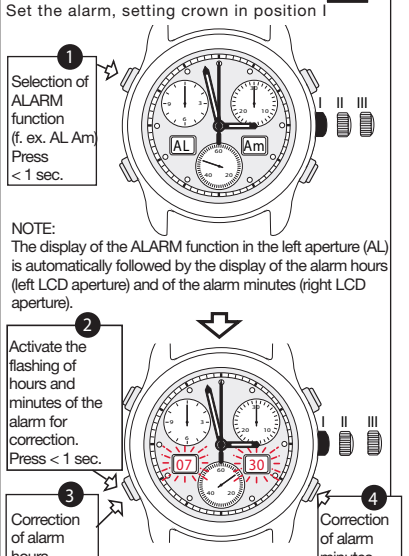


## ALARM G

Set the alarm (cont.)

NOTE:
Once the hours and minutes of the alarm are set, activate or deactivate the alarm as follows:

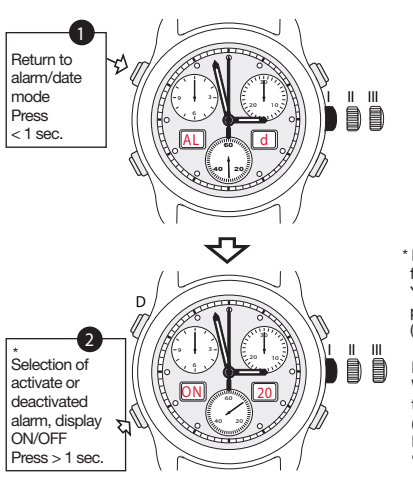


* If the alarm is active (On), a beep will confirm this function.
You can also check the alarm-bell by pressing pushbutton D for longer than 1 sec. (demo alarm mode).

BEMERKUNG:
When setting the alarm, make sure that the analog time (hands) corresponds to the digital time (right / left apartures).
If it does not, please see paragraph "Setting the time"

## TIMING MODE H

LAP-TIME function

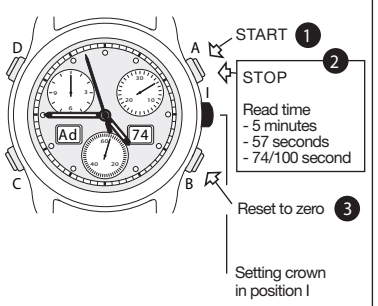


WARNING
Before taking the time, put back the chronograph hands to their original position.
If necessary, see paragraph "Setting the timers to zero".

1 to 3 order of functions

## TIMING MODE I

ADD function

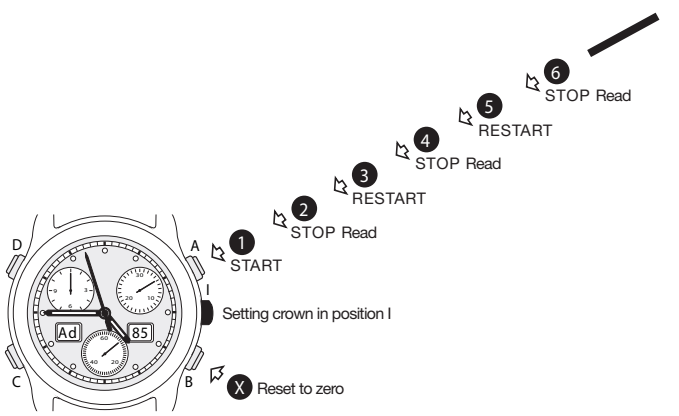


1 to X order of functions

## TIMING MODE J

SPLIT-TIME or
INTERMEDIATE TIMES function

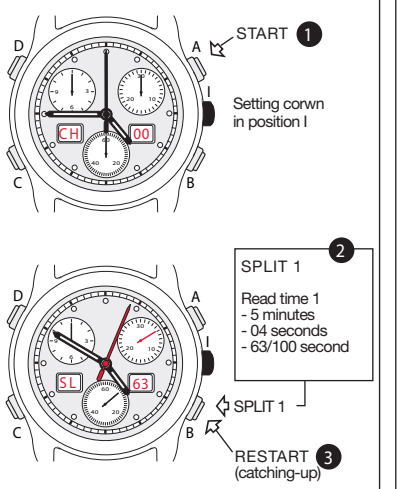


1 to 3 order of functions

## TIMING MODE K

SPLIT-TIME or
INTERMEDIATE TIMES function (cont.)

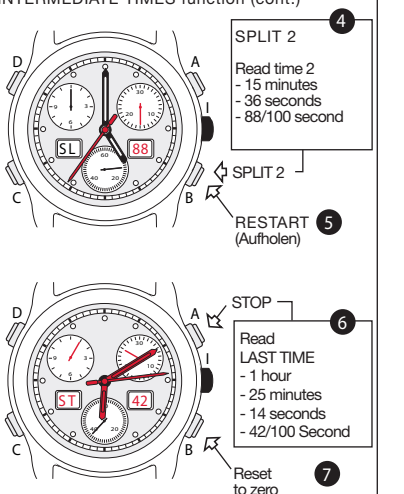


4 to 7 order of functions

## TIMING MODE L

LAP-TIME function

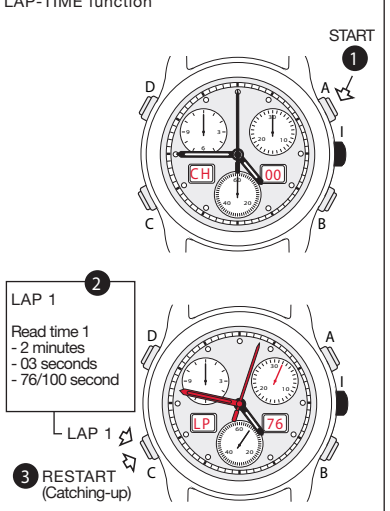


1 to 3 order of functions

## TIMING MODE M

LAP-TIME function (cont.)

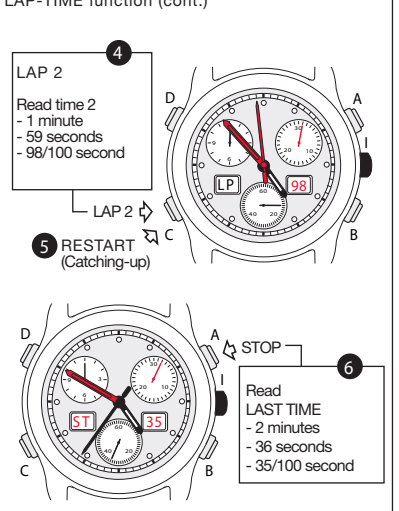


4 to 6 order of functions

## TIMING MODE N

LAP-TIME function (cont. and end)

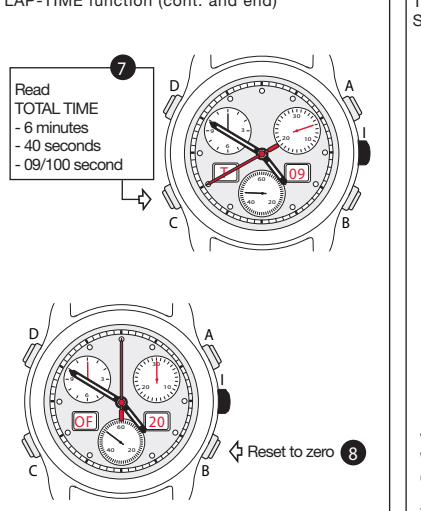


7 to 8 order of functions

## CORRECTION MODE O

Time zone correction
Setting crown in position II

WARNING
When correcting the time zone, the hours of digital time (left indicator) will be modified as the hands are moved.

You can also adjust the digital time by hand.

## CORRECTION MODE P

Time zone correction
(digital time)
Setting crown in position II

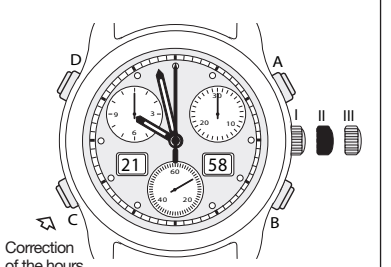


NOTE
Quick pressure on pushbutton:
slowly put forward the hours of digital time.

Long pressure (> 1 sec.) on pushbutton:
quickly put forward the hours of digital time.